



ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com

Installation Procedure: TV/DVD System in Island Escape Spas (Version 2)

(FOR DVD shown below)



1. Take the DVD out of the DVD box and unwrap it. There are two DVD types with Island Escape Spas. If the front of your DVD looks like the picture above and the back like the picture below. Please follow these step by step instructions below. Otherwise you have the second type of DVD player and please go to the instruction sheet labeled "Installation Procedure: TV/DVD System in Island Escape Spas (Version 1)".



2. (back of DVD, multi-prong power cabinet)



ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com



3. You will see many wires coming from the DVD. You will only need to connect one of the yellow wires above to make the whole system work (shown later). The other wires are unused.



4. You have 2 remotes. The one on the left controls the DVD. The one on the right controls the TV is.

ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com



5. In the next few slides we will show you how to hook the TV to the DVD. Make sure that you feed all necessary wires above through the DVD box first before connecting them. We will explain where these wires come from next.




6. You will need to open the cabinetry to find the proper wires that get connected to the DVD. You may need to open up more than one cabinet.

ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com

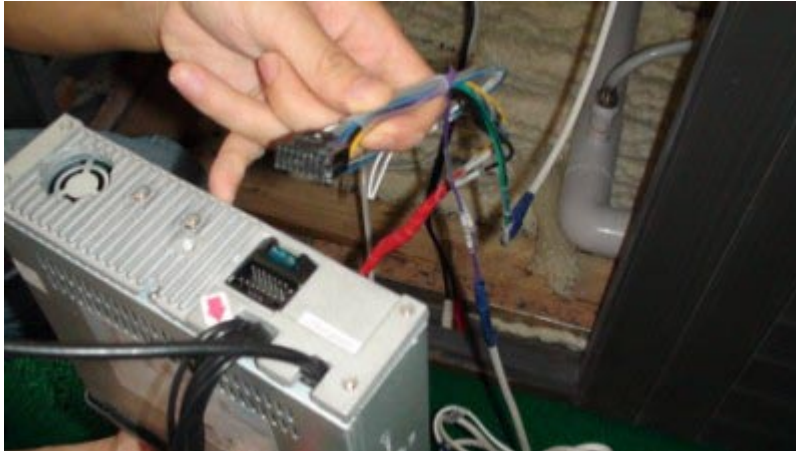

7. First, find the black multi-pronged power cable shown above. You will have to look for it somewhere inside the hot tub cabinetry. It will most likely be by the power boxes or the speakers.



8. Plug the black multi-pronged cable into the DVD as shown.

ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com



9. Next find a set of wires as shown above coming from the TV. You will only use one of the two white cables above (the rca jack). The other two wires are unused. The other white cable can be used optionally to connect your TV to cable, but is not needed for the DVD.




10. Connect the white wire from the TV into either one of the yellow video out wires coming from the DVD.

ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com

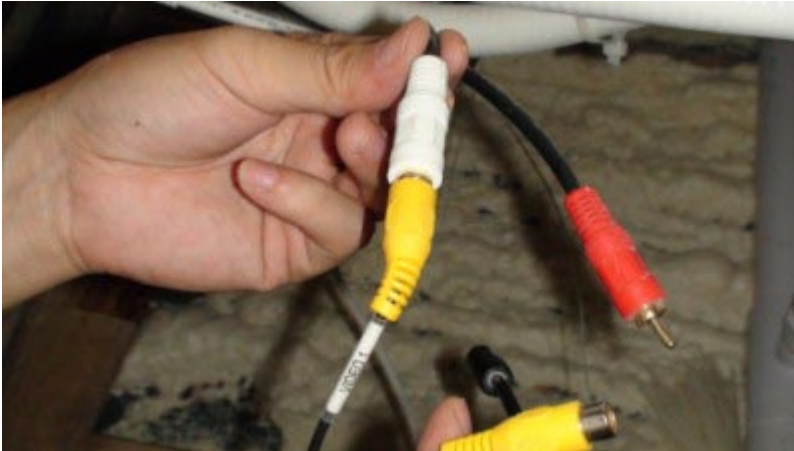

11. The TV/DVD is now fully connected. All other wires are unused.



12. Put the DVD back into its hole.

ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com



13. Remove the face plate from the DVD so that it fits in.




14. Point the remote at the DVD and turn on the DVD.



ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com

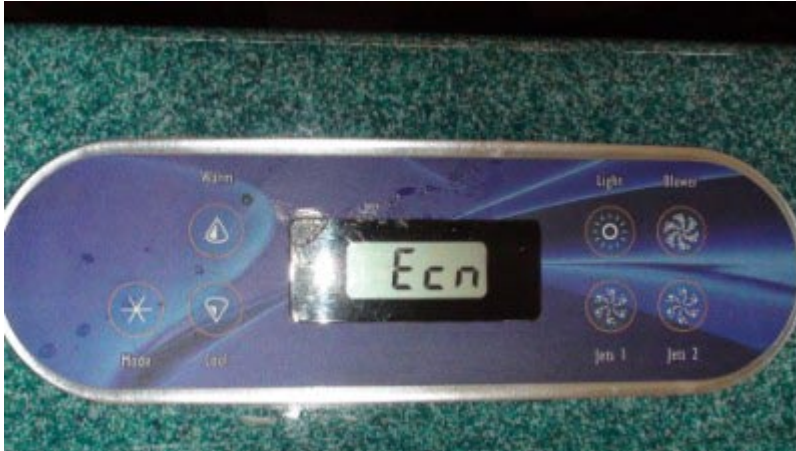

15. You may have one of many control systems installed on your hot tub. The Balboa system, shown in blue on the top needs to have the "Jets 2" button pushed to raise the TV. The other control systems need to have "Pump 2" button on to raise the TV. The tub must be full of water to activate the jets.


ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com



16. Turn the silver knob above to raise the TV after turning on pump 2. The TV will rise from the cabinet.

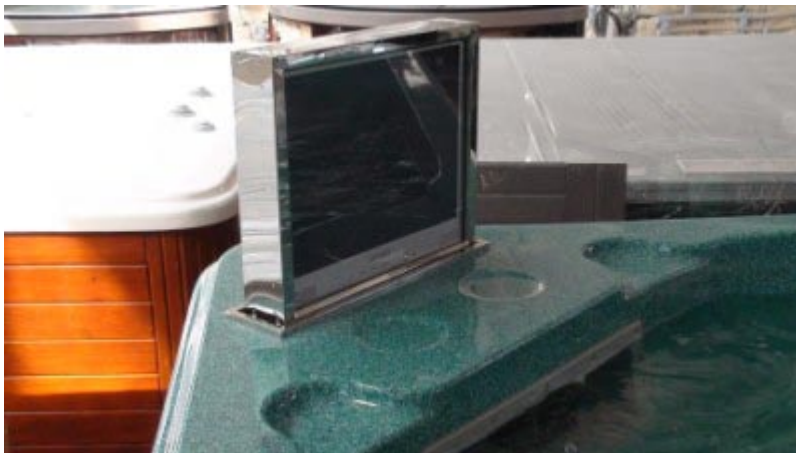

17. Raised TV shown above.



ChooseHotTubsDirect.com

767 Bryant St. #201, San Francisco, CA 94107

Phone: +1-415-618-0681 Fax: 1-415-618-0682 Email: service@choosedirect.com



18. Hit the Power button on the TV controls to turn on the TV. Then hit the play button on the DVD remote to start the DVD.